
( (

## DD2702H Emitter Specification

Version NO.: A/o1



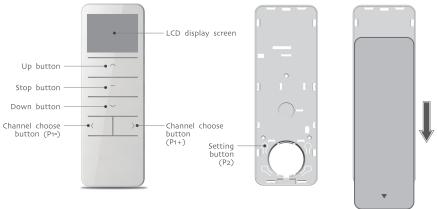

DD2702H 15-channel emitter DD2702H Back

battery. Please have batteries for recycling. Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries

If you need to change the battery, please push down the rear cover.



## Technical support

Technical support

Technical specification	Function instruction
• Input voltage: 3V (CR2450) • Transmitting frequency: 433.925MHz • Transmitting power: 10 Milliwatt • Operating temperature: -10°C ~ 50°C • Transmssion distance:	DD2702H is 15-channel emitter. One number of LCD screen means one control channel. Press "channel choose" button P1- (number descending) or P1+ (number increasing) to change the channel. On the analogy of this, loose finger when the LCD screen shows the suitable channel that you select effective channel. If LCD screen number show "o" that means all channels if effective (group control state). When the group control status, you can not setting up, add emitter and other settings. When the voltage is below 2.6V, the LCD screen shows the battery icon, indicating the replacement of the battery.
outside: 200 meters, inside (between two walls): 35 meters	Notice: Emitter couldn't be exposed to moisture and striked, so as not to affect life. When you use emitter, if found emission distance obviously short or less sensitive, please change another same new

according to the instructions.



In the setting state, press the up or down button you can quit quickly, if you want to change the valid channels, reset it.

The screen

will show o

OK

Setting is ok

Stop button×1

function

(P1+button+
P1-button)×1

Press P1+button and P1-button, at the same time, hold on

Press P1+button or P1-button or P1-button, selecting the channel (channel 15) you need



